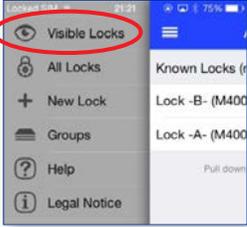
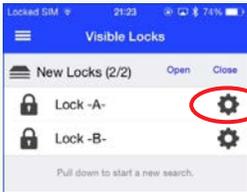
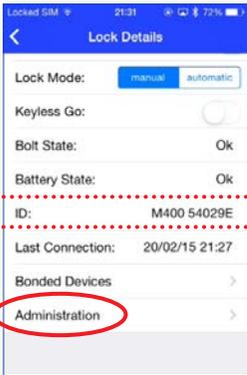


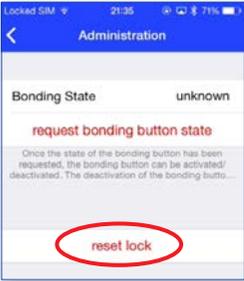
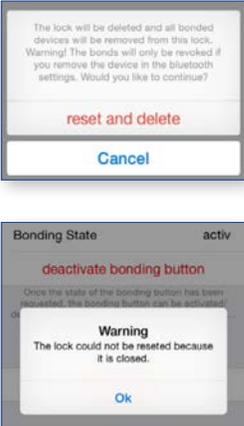
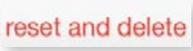
DELETING LOCKS / BOND LIST

Final deletion of individual locks / resetting iOS settings.

Important note! Perform the following steps very carefully.

Display / Menu	Description	Action
 	<p>Open the menu and select the menu item: “Visible Locks”.</p> <p>Before performing the following steps, make sure that you release the lock if it is closed.</p>	  
	<p>Select the lock to be modified by tapping on the  icon next to the lock. Example: “Lock -A-”</p>	
	<p>Navigate to the screen section displayed.</p> <ol style="list-style-type: none"> Important: Make a note of the ID of the lock. Select “Administration”. 	<p>Administration</p> 

DELETING LOCKS / BOND LIST

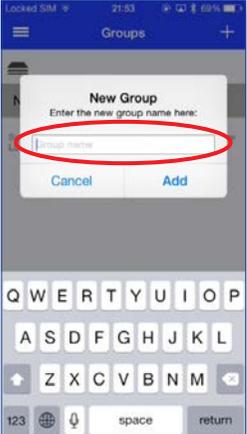
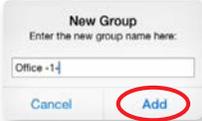
Display / Menu	Description	Action
	<p>Select the “reset lock” function</p>	
	<p>Note: Resetting is only possible if the lock is open and no battery warning is issued. Ensure that the lock is open and the batteries have sufficient energy. Observe the information in the display of the iOS device and confirm. “reset and delete”.</p>	
	<p>Navigate back to the home screen.</p> <p>Open the global settings and then select Bluetooth.</p>	 

DELETING LOCKS / BOND LIST

Display / Menu	Description	Action
	<p>Select the lock reset in the App with the  icon.</p> <p>If there are several devices in the list, refer back to your notes - see first page - to identify the lock.</p>	
	<p>Confirm the delete command “Forget This Device” and the following safety request with “OK”.</p>	 
	<p>The screen returns to the previous display.</p> <p>The list is refreshed after some time and the selected lock is removed.</p> <p>Close the iOS settings.</p> <p>The lock has been deleted completely.</p>	

SETTING UP GROUPS

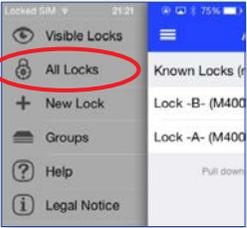
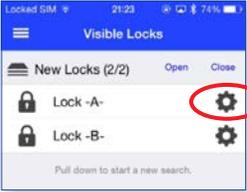
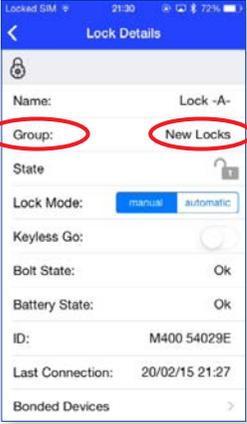
You can store locks in different groups. Example: office, at home etc. This provides a clearer overview. The group **"New Locks"** already exists and cannot be changed. Proceed as described below to create new groups and assign locks.

Display / Menu	Description	Action
	<p>Open the menu and select the menu item: "Groups".</p>	
	<p>The already taught in locks are stored in the group "New Locks". Select the  icon to create a new group.</p>	
	<p>Give the group a unique name of your choice and confirm with "Add". The screen returns to the previous display following successful confirmation.</p>	 

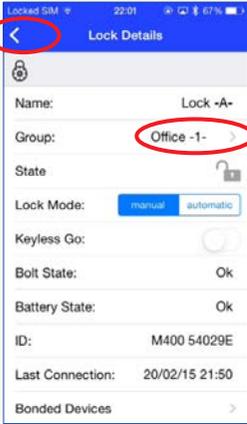
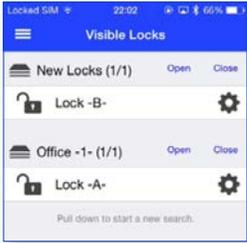
SETTING UP GROUPS

Display / Menu	Description	Action
	<p>The group “Office -1-” was created successfully. There are no (0) locks in this group.</p> <p>Return to the main menu.</p>	

ASSIGNING LOCKS TO GROUPS

Display / Menu	Description	Action
	<p>Open the menu and select the menu item: “All Locks”.</p>	 
	<p>Select the lock you want to assign to another group. Example: “Lock -A-” For this purpose, tap on the  icon next to the lock.</p>	
	<p>The overview “Lock Details” opens for the selected lock. Tap on “New Locks” next to the item “Group”. The following window opens automatically.</p>	
	<p>Tap onto the menu item “Office -1-” and the lock is assigned to this group. The view automatically switches to the previous window and the change has completed.</p>	

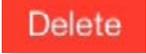
ASSIGNING LOCKS TO GROUPS

Display / Menu	Description	Action
	<p>The lock was successfully assigned to the group “Office -1-”. Return to the main view with the  button.</p>	
	<p>In the main view you can now see that one lock was assigned to the group “New Locks” and one to the group “Office -1-”. You can repeat this process for other locks.</p>	

DELETING GROUPS

Only groups which do not contain any locks can be deleted.

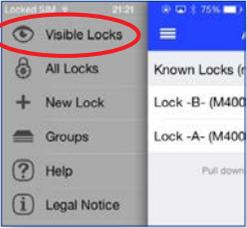
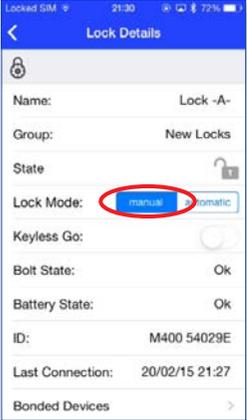
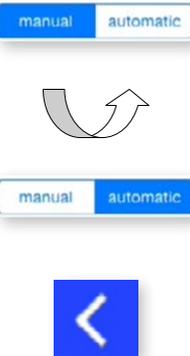
If you want to delete a group which still contains locks, first of all move existing locks to another group (see section: Assigning locks to groups) or delete the locks from your iPhone (see section: Deleting locks).

Display / Menu	Description	Action
	<p>Open the menu and select the menu item: “Groups”.</p>	
	<p>Swipe across the group to be deleted to the left. Caution! Only empty groups can be deleted. Example: “Office -1-”</p>	
	<p>Take note of the highlighted information. Tap “Delete” and the group is deleted.</p>	
	<p>The display is automatically updated. The group was deleted. Return to the menu.</p>	

SPECIAL FUNCTION “AUTOMATIC MODE”

The system has special functions that you can configure manually for each individual lock.

If this function is enabled, the locks close automatically after a pre-set time of approx. 1 minute once you leave the reception range.

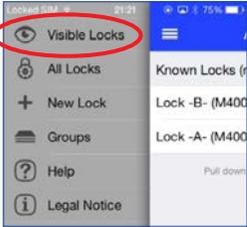
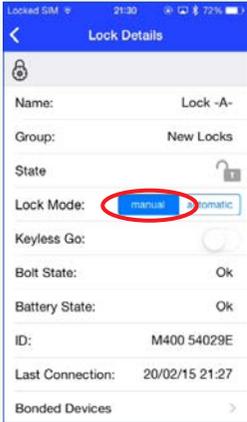
Display / Menu	Description	Action
	<p>Open the menu and select the menu item: “Visible Locks”.</p>	
	<p>Select the lock to be modified by tapping on the  icon next to the lock. Example: “Lock -A-”</p>	
	<p>The default setting is manual. This means that each locking process must be actuated manually by you. Switch to “automatic” and the lock closes automatically when the connection between lock and iPhone is lost.</p> <p>You can return to the previous menu with the  button.</p>	

“KEYLESS GO” SPECIAL FUNCTION

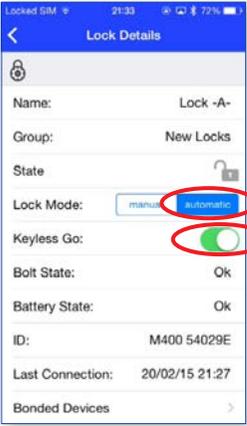
The system has special functions that you can configure manually for each individual lock. The Keyless Go function is a convenient setting. The locks close automatically on leaving the reception area and open automatically when you return to the reception area.

System information:

The connection is established and controlled exclusively by the iOS system. Delays in establishing the connection are thus determined by the system and LEHMANN has no influence on this.

Display / Menu	Description	Action
	<p>Open the menu and select the menu item: “Visible Locks”.</p>	 
	<p>Select the lock to be modified by tapping on the  icon next to the lock. Example: “Lock -A-”</p>	
	<p>To be able to switch on the Keyless Go function, first the Automatic Mode must be enabled.</p>	  

“KEYLESS GO” SPECIAL FUNCTION

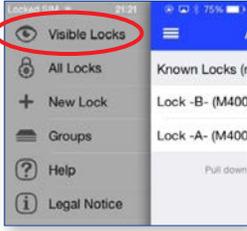
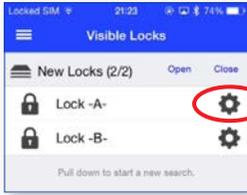
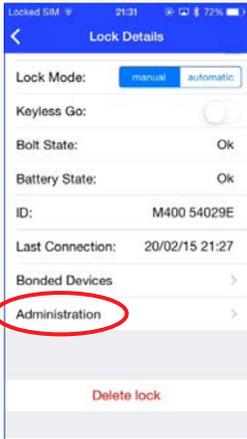
Display / Menu	Description	Action
 <p>The screenshot shows the 'Lock Details' screen with the following information: Name: Lock -A-, Group: New Locks, State: [lock icon], Lock Mode: manu automatic (circled in red), Keyless Go: on (circled in red), Bolt State: Ok, Battery State: Ok, ID: M400 54029E, Last Connection: 20/02/15 21:27, and Bonded Devices with a right arrow.</p>	<p>The standard setting of “<i>Keyless Go</i>” is off.</p> <p>If you enable the Keyless Go function, the lock will automatically open when you enter the reception area of the furniture lock with your iOS device.</p> <p>Please observe the warnings and the fact that this function can only be enabled when the Automatic Mode is also switched on.</p> <p>You can return to the previous menu with the  button.</p>	   

NOTE

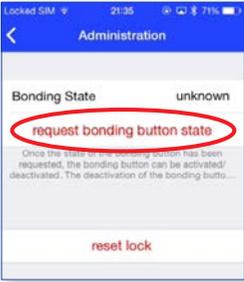
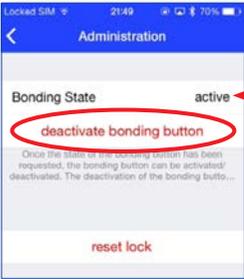
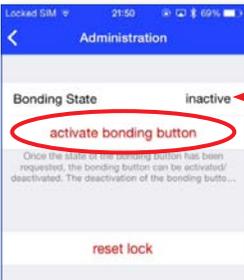
The connection is established and controlled by the iOS system. Delays in establishing the connection are thus determined by the system and LEHMANN has no influence on this.

SPECIAL FUNCTION SAFETY SECURING THE LOCK AGAINST PROGRAMMING

An additional function lets you secure the locks against unauthorised programming.
Observe the safety precautions at the end of the page.

Display / Menu	Description	Action
	<p>Open the menu and select the menu item: “Visible Locks”.</p>	 
	<p>Select the lock to be modified by tapping on the  icon next to the lock. Example: “Lock -A-”</p>	
	<p>Navigate to the displayed screen section and select “Administration”.</p>	

SPECIAL FUNCTION SAFETY SECURING THE LOCK AGAINST PROGRAMMING

Display / Menu	Description	Action
	<p>Select the “request bonding button state” function.</p>	
	<p>The “Learn” button is always enabled for brand new locks.</p> <p>This means that each iOS device can connect with the lock when someone actuates the “Learn” button.</p> <p>Press “deactivate”. This prevents additional iOS devices from connecting.</p>	
	<p>The “Learn” button is now set to “inactive”. No new iOS devices can be connected to the lock.</p> <p>The blocked connection can be cancelled again by pressing the “activate” function.</p> <p>You can return to the previous menu with the  button.</p>	 

SAFETY PRECAUTIONS

- Before deleting the locks, make sure these are not in a locked state.
- If possible, always make sure that a second iOS device is programmed for the locks (as “spare key”).
- Non-observance of the safety precautions can result in your furniture being locked and you no longer having access to the lock.

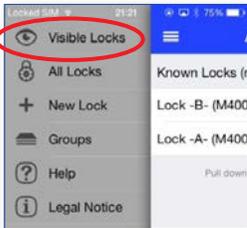
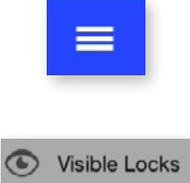
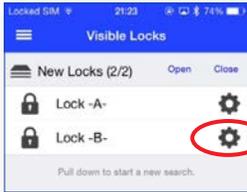
SETTING THE TRANSMISSION/RECEPTION RANGE

The transmission/reception range can be set independently for each individual lock in 5 stages.

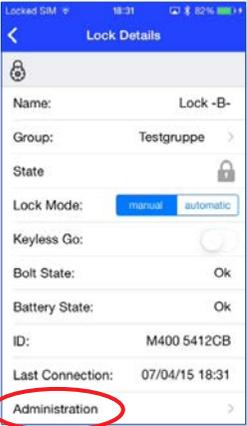
Please note:

Radio signals are not confined to rooms with regard to technology and do not require direct visual contact for triggering the desired action. The send command can thus be sent across larger distances and even through walls if required. At the same time, radio signals can be adversely affected by structural conditions, electrical fields and reflections. For reasons of safety and control, particular attention needs to be paid to usage of the display unit on the furniture lock. The display unit signals and acknowledges not only the locked status, but also informs you about the status in case of weak or empty batteries.

Due to the possible influences, the ranges to be set can vary a lot depending on environmental conditions. Please always check which range is suitable for your application. The settings and tests should be performed with open cabinet door and drawn-in bolt in any case, enabling a correction in case the connection gets lost.

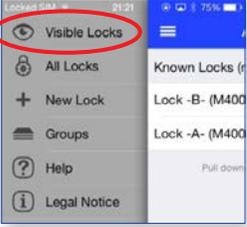
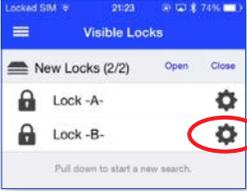
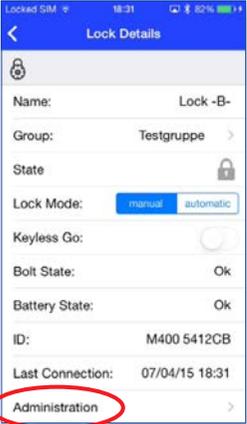
Display / Menu	Description	Action
	<p>Open the menu and select the menu item: “Visible Locks”.</p>	
	<p>Select the lock to be modified by tapping on the  icon next to the lock. Example: “Lock -B-”</p>	

SETTING THE TRANSMISSION/RECEPTION RANGE

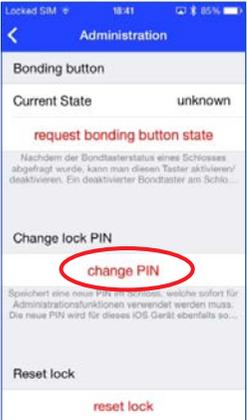
Display / Menu	Description	Action
	<p>Select “Administration”.</p>	
 	<p>First of all, request the transmitting power configured for this lock by selecting: “request signal strength”.</p> <p>The currently configured signal strength is displayed.</p> <p>The “set signal strength” function will open the following dropdown menu.</p>	 
	<p>Select one of the desired signal strengths. Example: “Medium”</p> <p>Refer to the information provided at the start of this section for this purpose.</p> <p>Following successful selection, the screen returns to the lock overview.</p>	

LOCKING THE SYSTEM WITH PIN CODE / CHANGING THE PIN CODE

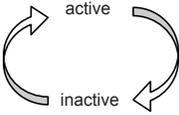
The system is equipped with a standard factory PIN code when delivered. Each iOS device can thus immediately connect with the lock without any additional settings. To protect your system against unauthorised access, you should change the pre-set PIN. Proceed as follows:

Display / Menu	Description	Action
	<p>Open the menu and select the menu item: “Visible Locks”.</p>	 
	<p>Select the lock to be modified by tapping on the  icon next to the lock. Example: “Lock -B-”</p>	
	<p>Select “Administration”.</p>	

LOCKING THE SYSTEM WITH PIN CODE / CHANGING THE PIN CODE

Display / Menu	Description	Action
 <p>The screenshot shows the 'Administration' screen with the following elements: 'Bonding button', 'Current State: unknown', 'request bonding button state', 'Change lock PIN' (with a red circle around the 'change PIN' button), and 'Reset lock' (with a red circle around the 'reset lock' button).</p>	<p>On the page displayed, scroll down to the item “Change lock PIN” and select “change PIN”.</p>	
 <p>The top screenshot shows a dialog box titled 'change PIN' with the text 'Please enter the new PIN.' and a red circle around the input field. The bottom screenshot shows the 'Administration' screen with 'Current PIN: 123456'.</p>	<p>Enter your personal numerical six-digit PIN code.</p> <p>The display returns to the previous screen.</p> <p>Scroll upwards on the page displayed and check that the code displayed here is correct.</p>	

LOCKING THE SYSTEM WITH PIN CODE / CHANGING THE PIN CODE

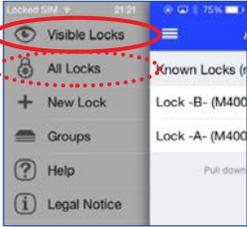
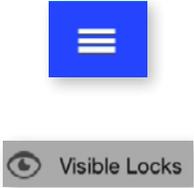
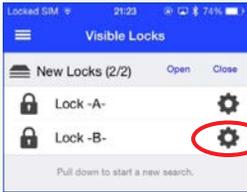
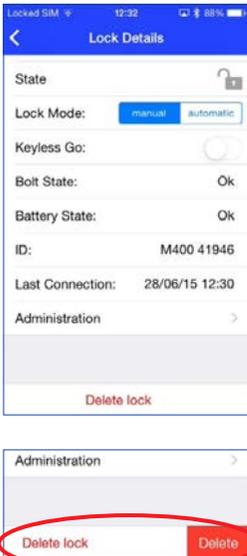
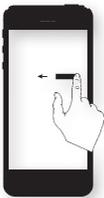
Display / Menu	Description	Action
<div data-bbox="120 209 365 379"> <p>Bonding button</p> <p>Current State active</p> <p>deactivate bonding button</p> <p><small>After you have requested the bonding button state of the lock, you can activate / deactivate the button. A deactivated bonding button prevents the pairing between other iOS devices and this lock.</small></p> </div> <div data-bbox="120 411 365 582"> <p>Bonding button</p> <p>Current State inactive</p> <p>activate bonding button</p> <p><small>After you have requested the bonding button state of the lock, you can activate / deactivate the button. A deactivated bonding button prevents the pairing between other iOS devices and this lock.</small></p> </div>	<p>With this measure you can block the programming button on the lock. No additional iOS devices can be programmed for the lock, until you release this function again.</p> <p>Now scroll to the menu item “Bonding button” and switch the “active” function to “inactive”.</p>	

DELETING LOCKS

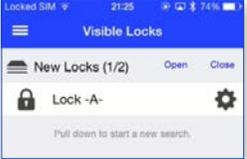
Locks which no longer have a connection (e.g. following a reset, in case of loss or change of location) and which are no longer required can be removed from the list **“All Locks”** with the **“Delete lock”** function.

This function does NOT replace RESET.

Observe the safety precautions at the end of the page.

Display / Menu	Description	Action
	<p>Open the menu and select the menu item: “All Locks”.</p>	
	<p>Select the lock to be deleted by tapping on the gear icon next to the lock. Example: “Lock -B-”</p>	
	<p>Navigate to the bottom of the screen and confirm “Delete”.</p> <p>Caution! Important!</p> <p>To delete the lock completely, it must also be removed from the bond list. Also see section: Deleting the bond list under iOS settings.</p> <p>No connection is required for deleting a lock. Closed locks can also be deleted. It is important that you read the safety precautions at the end of the next page.</p>	

DELETING LOCKS

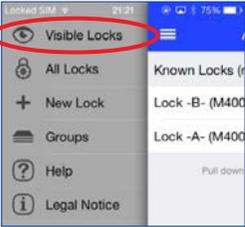
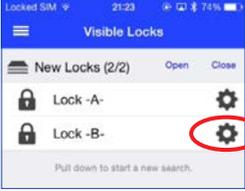
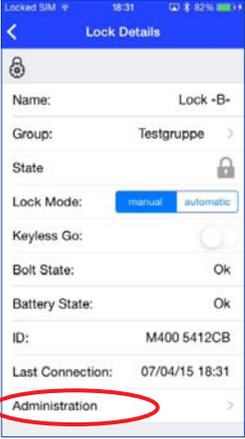
Display / Menu	Description	Action
	<p>Confirm the security prompt and the lock is deleted. The display returns to the previous screen</p>	
	<p>Lock -B- was deleted.</p>	

SAFETY PRECAUTIONS

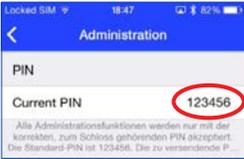
- Before deleting the locks, make sure these are not in a locked state.
- If possible, always make sure that a second iOS device is programmed for the locks (as “spare key”).
- Non-observance of the safety precautions can result in your furniture being locked and you no longer having access to the lock.

SPECIAL FUNCTION SAFETY / USING A CHANGED PIN, RELEASING LOCKS

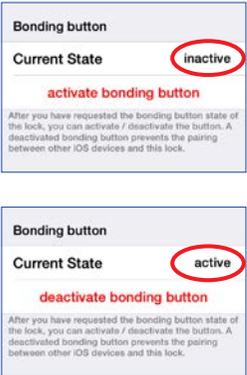
If an iOS device is to be connected with a lock which is secured by a deactivated bonding button and a changed PIN, you will need an already connected iOS device and the changed PIN.

Display / Menu	Description	Action
	<p>Open the menu with an already connected lock and select the menu item: “Visible Locks”</p>	 
	<p>Select the already connected lock by tapping on the  icon next to the lock.</p>	
	<p>Navigate to the displayed screen section and select “Administration”.</p>	

SPECIAL FUNCTION SAFETY / USING A CHANGED PIN, RELEASING LOCKS

Display / Menu	Description	Action
	<p>Tap on the displayed current PIN (123456).</p>	
	<p>A cursor appears behind the displayed current Pin and the keypad is displayed at the bottom of the screen.</p>	
	<p>Delete the displayed current PIN with the  button.</p>	

SPECIAL FUNCTION SAFETY / USING A CHANGED PIN, RELEASING LOCKS

Display / Menu	Description	Action
	<p>Enter the changed PIN and confirm with “Return”. The cursor and keypad disappear.</p>	<p>Example:</p> <p>223344</p> <p>return</p>
	<p>Scroll to the menu item “Bonding button” and switch the “inactive” function to “active”.</p> <p>iOS devices not yet connected can now be programmed.</p>	